


VON DUPRIN®

INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
2. Prepare door for cylinder:
 - A. Transfer line X-X from inside (exit device side) of door to outside (cylinder side) of door. Use extra care if edge of door is beveled. Make sure line X-X is parallel to edge of door.
 - B. Locate and prepare all holes as shown.
3. Apply cylinder.
4. Cut cylinder tailpiece to extend beyond inside face of door by amount listed:

44 Rim	5/8" to 3/4"
88 Rim	5/8" to 3/4"
8827	1/4" to 1/2"
5. Apply exit device:
 - A. Remove key from cylinder.
 - B. Attach lock stile case to door.
 - C. Test key action.

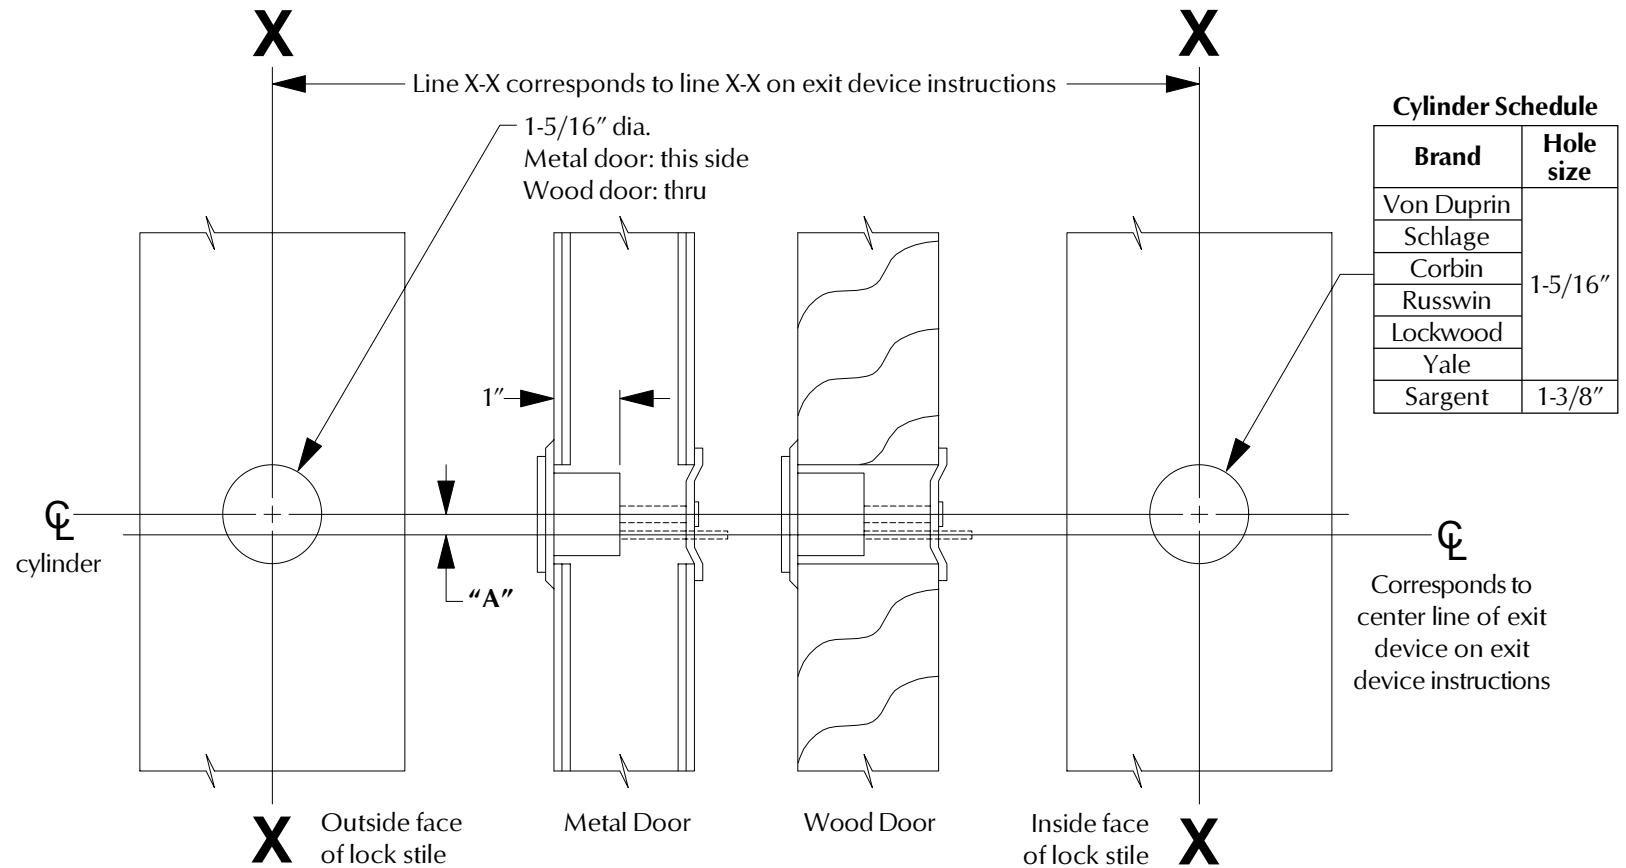

Cylinder Schedule

Brand	Hole size
Von Duprin	1-5/16"
Schlage	
Corbin	
Russwin	
Lockwood	
Yale	1-3/8"
Sargent	

Device Application Schedule

Device	Dimension "A"
44 Rim	1/4"
88 Rim	1/4"
8827	1-3/4"

LHR shown, RHR opposite
For cutouts on inside face of door, see exit device instructions




CYLINDER PREPARATION FOR 44 RIM, 88 RIM, AND 8827 DEVICES

Copyright © 2004 Ingersoll-Rand.
All rights reserved.

PAGE NO.
1 of 1

REVISION
6

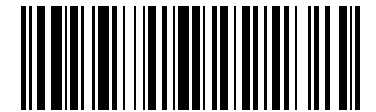

941015-00