



**Metal door:**  
 #7 drill and 1/4-20 tap  
 inside only (6 places)  
**Wood door:**  
 1/8\" drill x 3/4\" deep  
 pilot holes (6 places)

**Metal door:**  
 #7 drill and 1/4-20 tap  
 inside only (6 places)  
**Wood door:**  
 1/8\" drill x 3/4\" deep  
 pilot holes (6 places)

1-1/4\" diameter thru  
 (omit if not using  
 outside cylinder)  
 ⌀ device and strike  
 ⌀ device and strike  
 4\" diameter thru  
 (omit if not using  
 outside cylinder)

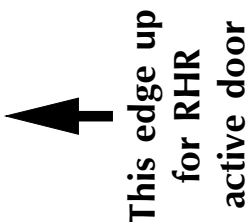

This edge up  
 for RHR  
 active door

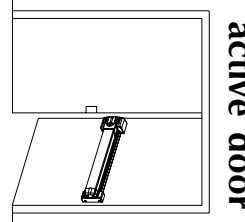

This edge up  
 for LHR  
 active door

Recommend 1/2" to edge of paper

**1/2" REMOVABLE A-40/A-95 3M ADHESIVE TAPE (HIGH TACK/LOW TACK DOUBLE COATED TAPE)**

Recommend 1/2" to edge of paper

**1/2" REMOVABLE A-40/A-95 3M ADHESIVE TAPE (HIGH TACK/LOW TACK DOUBLE COATED TAPE)**