



Metal door:
 #7 drill and 1/4-20 tap
 inside only (6 places)
Wood door:
 1/8\" drill x 3/4\" deep
 pilot holes (6 places)

Metal door:
 #7 drill and 1/4-20 tap
 inside only (6 places)
Wood door:
 1/8\" drill x 3/4\" deep
 pilot holes (6 places)

1-1/4\" diameter thru
 (omit if not using
 outside cylinder)
 ⌀ device and strike
 ⌀ device and strike
 4\" diameter thru
 (omit if not using
 outside cylinder)

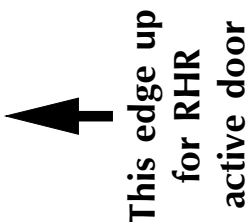

This edge up
 for RHR
 active door

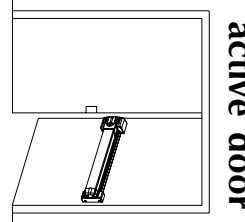

This edge up
 for LHR
 active door

Recommend 1/2" to edge of paper

1/2" REMOVABLE A-40/A-95 3M ADHESIVE TAPE (HIGH TACK/LOW TACK DOUBLE COATED TAPE)

Recommend 1/2" to edge of paper

1/2" REMOVABLE A-40/A-95 3M ADHESIVE TAPE (HIGH TACK/LOW TACK DOUBLE COATED TAPE)