

DEVICE APPLICATION SCHEDULE		
INSTALLATION	MIN. STILE	BACKSET
TWO VERT. ROD DEVICES	3 5/8"	2 3/16"
SINGLE DOOR	3 5/8"	2 3/16"

NOTE: BACKSET MAY VARY WHEN USED WITH COORDINATOR DEPENDING ON TYPE USED.

APPLICATION	PREPARATION
SURFACE APPLICATION OR 990 TRIM APPLICATION	#10-24 TAP-4 PLACES
210 TRIM APPLICATION	1/4" DIA. THIS SIDE
290 TRIM APPLICATION	13/32" DIA. OPPOSITE SIDE - 4 PLACES
SEX BOLT APPLICATION	

7/8" DIA.
FOR K, L & TP
1/2" DIA FOR NL-OP

1 11/16"
CL DEVICE

39 13/16"
TO FINISHED FLOOR

NOTE: RECOMMENDED DOOR UNDERCUT IS 1/4" FROM FINISHED FLOOR OR 1/8" FROM THRESHOLD.


NOTE: LATCH CASE PREPARATION TO BE MADE AT INSTALLATION ON DOOR.

NOTE: IT IS RECOMMENDED THE MOUNTING HOLES BE PREPARED IN THE FIELD.

FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED, SEE ADDITIONAL TRIM TEMPLATE.

REMOVE GLASS STOP HEAD OR BEAD IN AREA OF DEVICE IF REQUIRED

LHR SHOWN
RHR OPPOSITE

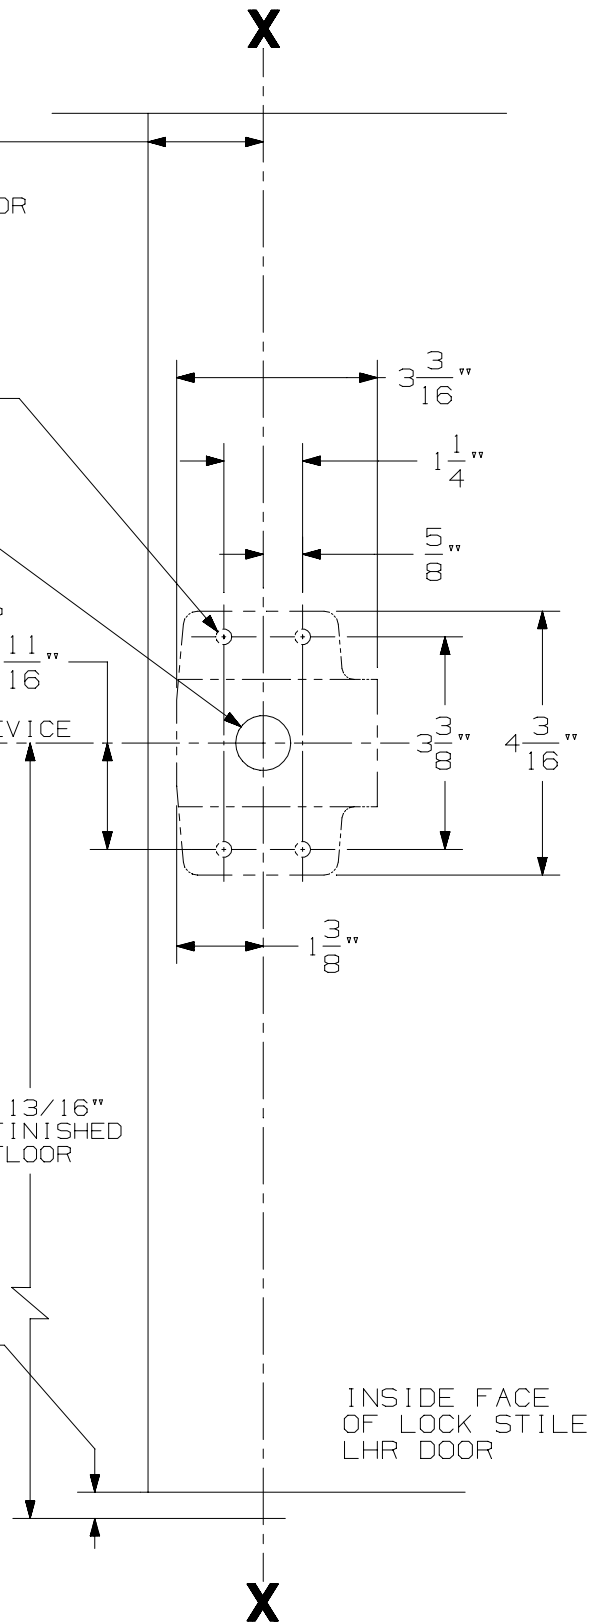

2227 & 2227-F EO, DT, K, L & TP
SERIES VERTICAL ROD DEVICE



NOTE: SEE MASTER SHEET NO. 10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER:

10013_7

DATE:
5-13-98