


DEVICE INSTALLATION SCHEDULE		
INSTALLATION	BACKSET	MIN. STILE
TWO VERTICAL ROD DEVICES	2 1/2"	3 5/8"

NOTES:

1. LATCH CASE PREPARATION TO BE MADE AT INSTALLATION ON DOOR.
2. IT IS RECOMMENDED THE MOUNTING HOLES BE PREPARED IN THE FIELD.
3. FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED, SEE TRIM TEMPLATE.
4. GLASS BEAD KIT AVAILABLE WHEN REQUIRED.
5. THE FIRE LATCH PREP IS FOR FIRE DOORS ONLY.

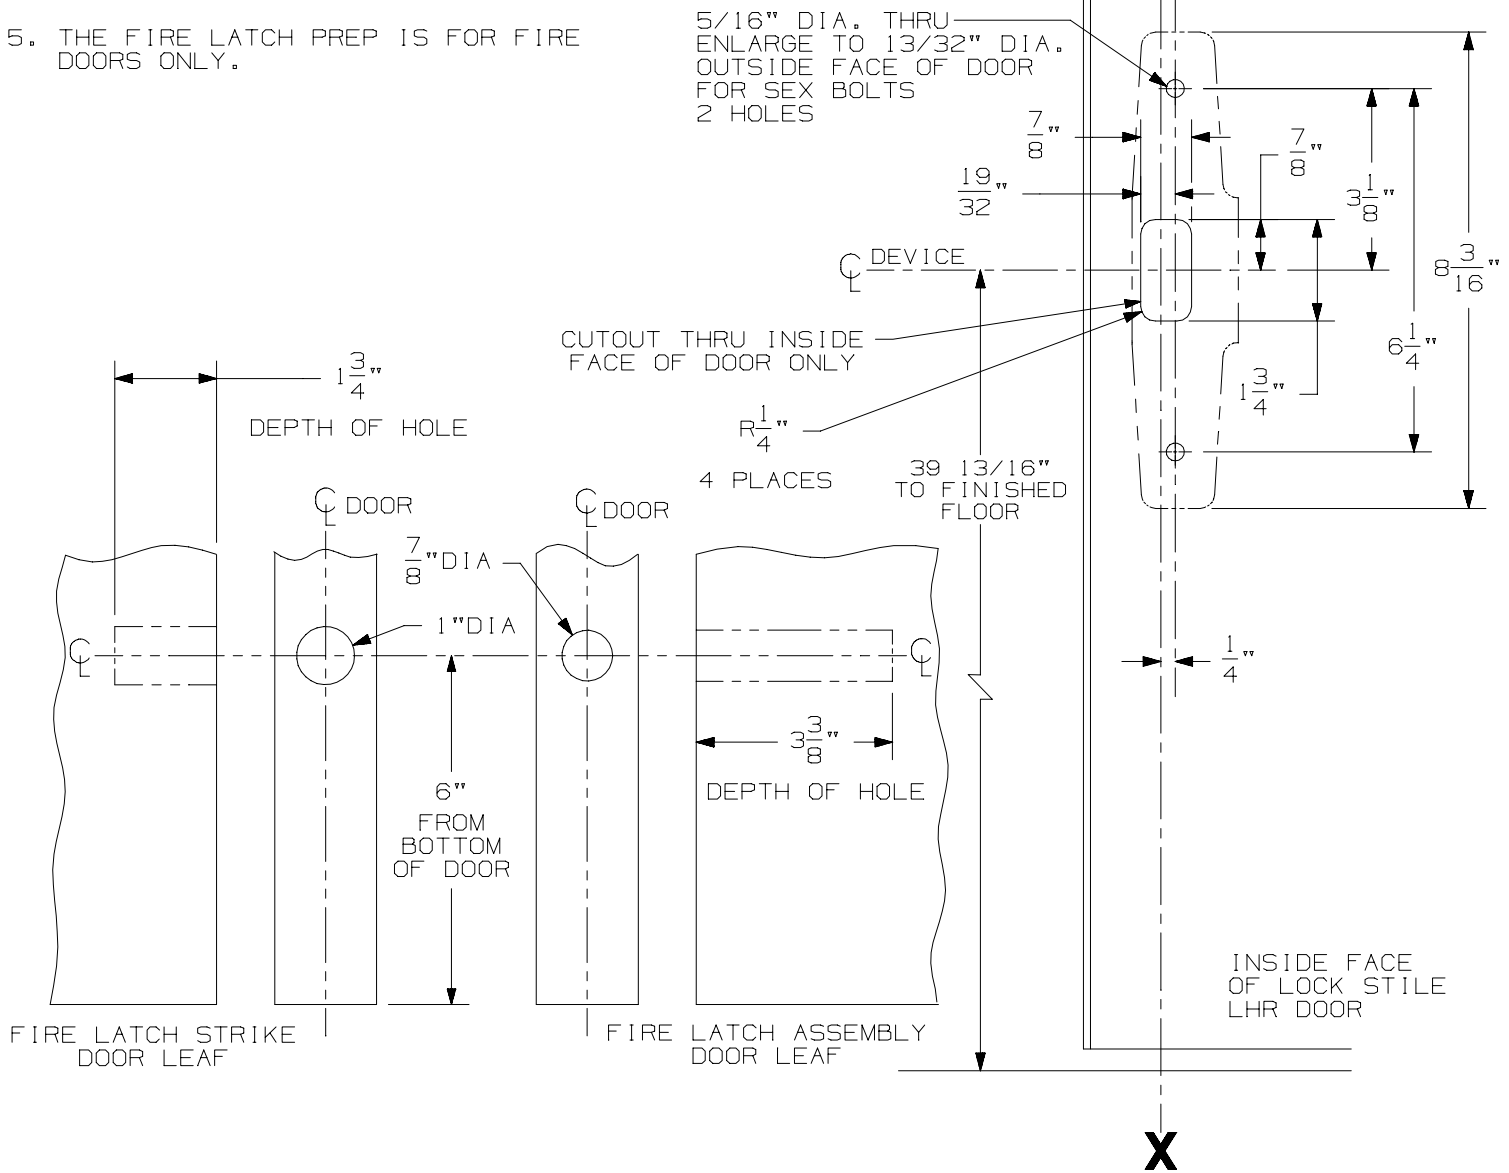

LHR SHOWN
RHR OPPOSITE

33/3527A-F-LBR SERIES
VERTICAL ROD DEVICE



NOTE: SEE MASTER SHEET NO. 10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER: 10050_0

DATE: 06-26-03