


NOTES: SEE MASTER SHEET NO. 10001 FOR SUGGESTED REINFORCING

230 NL TRIM

TEMPLATE NUMBER:

20037_2

DATE: 08-14-03

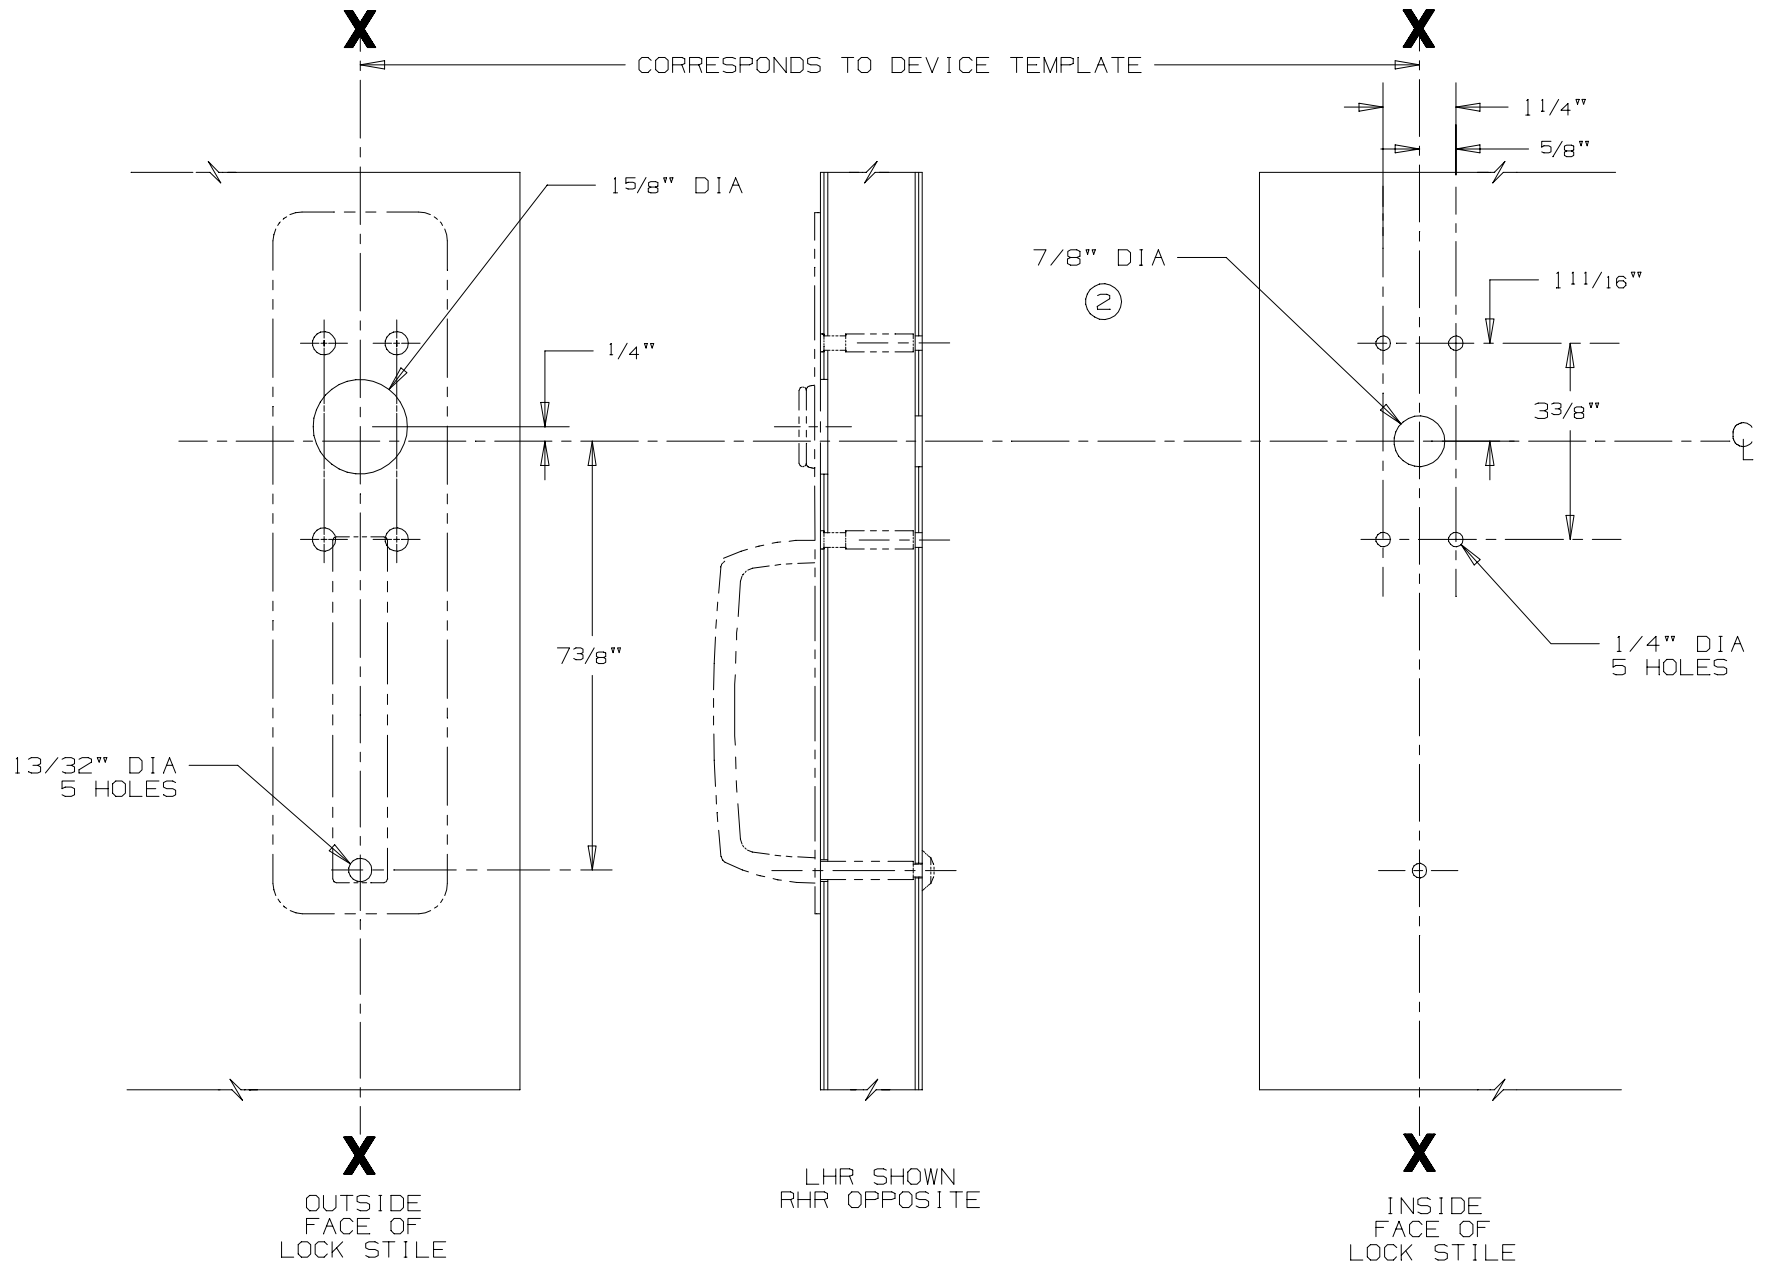

NOTE: IT IS RECOMMENDED THE MOUNTING HOLES BE PREPARED IN THE FIELD

FOR CUTOUTS ON INSIDE FACE OF DOOR SEE DEVICE TEMPLATE.