

DEVICE APPLICATION SCHEDULE		
INSTALLATION	MIN. STILE	BACKSET
TWO VERT. ROD DEVICES	3 5/8"	2 3/16"*
SINGLE DOOR	3 5/8"	2 3/16"

NOTE: BACKSET MAY VARY WHEN USED WITH COORDINATOR DEPENDING ON TYPE USED.

\* USE 2 3/4" BACKSET FOR WOOD FIRE DOORS


7/8" DIA THRU  
1/2" DIA FOR NL-OP

C DEVICE

39 13/16"  
TO FINISHED  
FLOOR

REMOVE GLASS STOP  
HEAD OR BEAD IN  
AREA OF DEVICE IF  
REQUIRED

INSIDE FACE  
OF LOCK STILE  
LHR DOOR

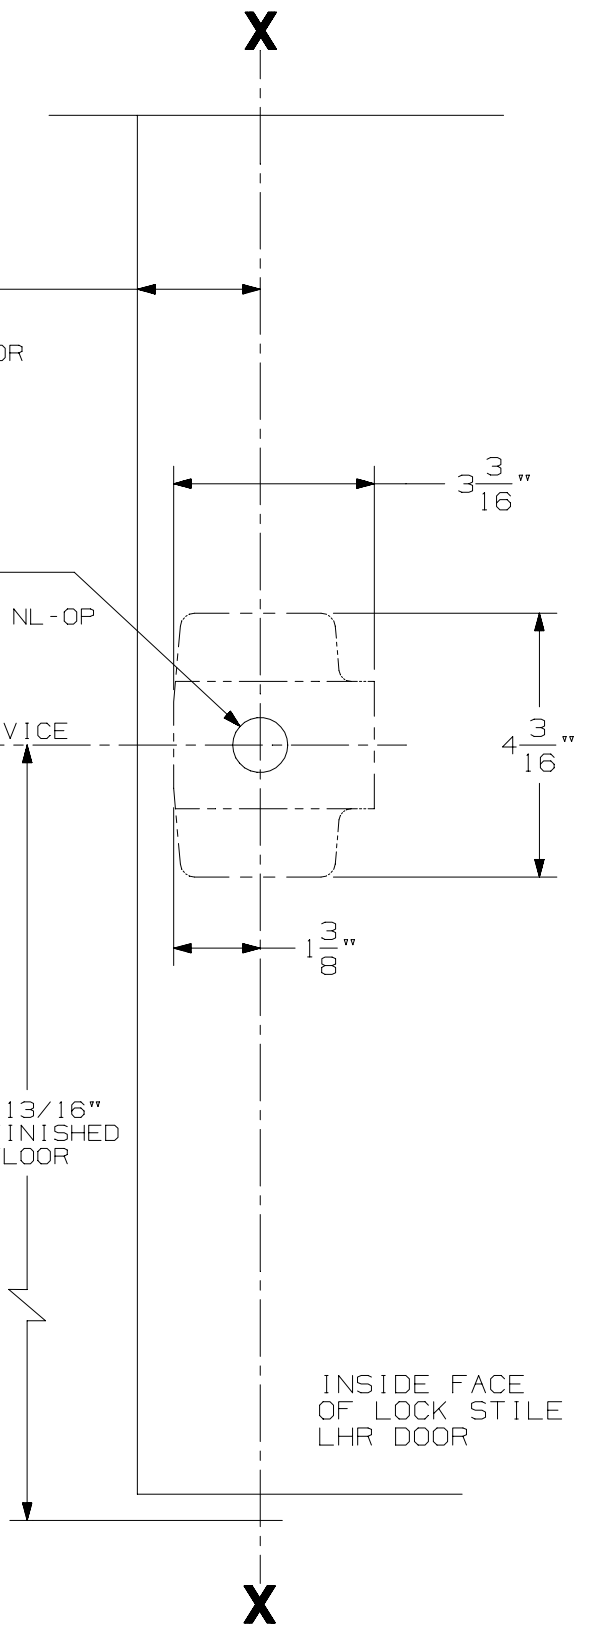

NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED, SEE ADDITIONAL TRIM TEMPLATE.

LHR SHOWN  
RHR OPPOSITE

2227 & 2227-F K, L & TP SERIES  
VERTICAL ROD DEVICE (WOOD DOOR)



NOTE:

TEMPLATE  
NUMBER:

W10013\_3

DATE:

8-31-98