VON DUPRIN®

INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
2. Prepare door for trim:
   - **A.** Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
   - **B.** Locate and prepare holes as shown.
3. For TP and NL trim, install rim cylinder (Figure 1).
4. For TP and TP-BE trim on 1-3/4″ thick door, cut 1/4″ off thumbpiece (Figure 2).
5. Apply trim.
6. For TP and NL trim, cut cylinder tailpiece to extend 7/16″ to 9/16″ out of exit device side of door.
7. Apply exit device, thru-bolt to trim (4 places), and use screw and #12 countersink washer for lower trim mounting stud.

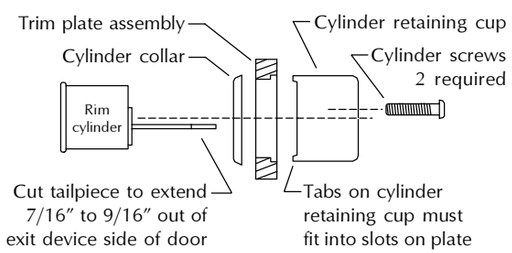

Figure 1

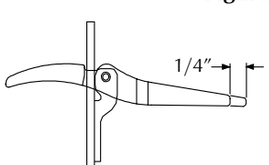

1/4″ cutoff required on thumbpiece for TP and TP-BE trim on 1-3/4″ thick doors

Figure 2

Line X-X corresponds to line X-X on exit device instructions

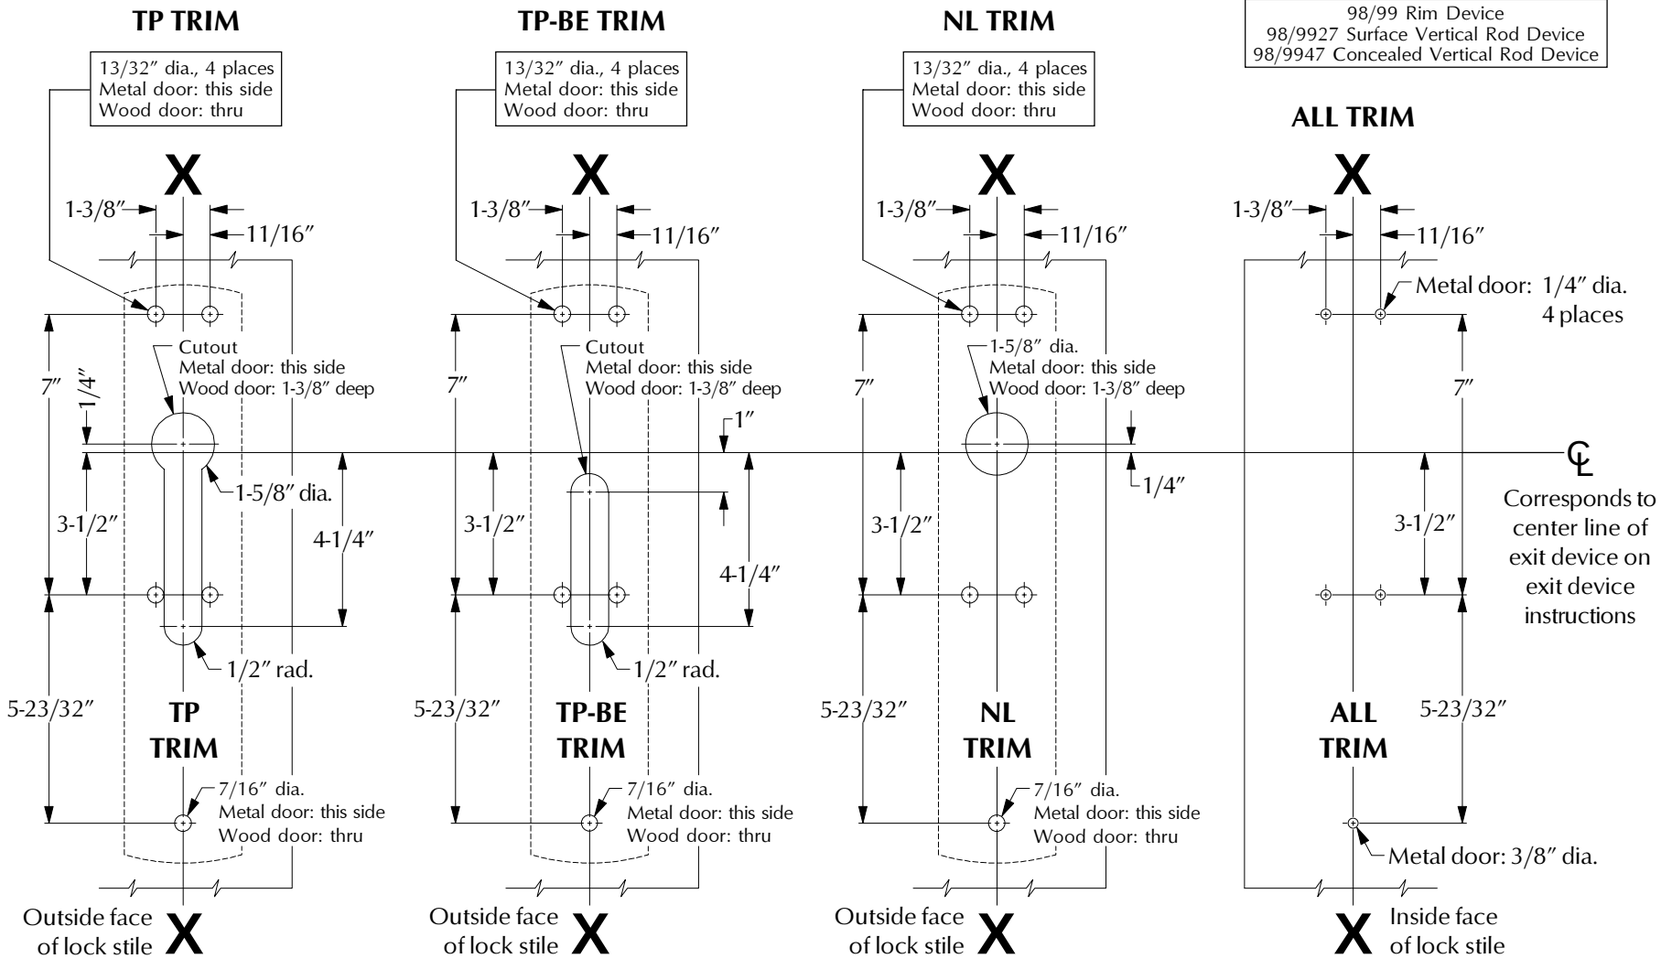

Device Application Schedule
98/99 Rim Device
98/9927 Surface Vertical Rod Device
98/9947 Concealed Vertical Rod Device

LHR shown, RHR opposite

For cutouts on inside face of door, see exit device instructions

Security & Safety®
Proven Source. Proven Solutions.™

990TP/TP-BE/NL TRIM
FOR RIM AND VERTICAL ROD DEVICES

Copyright © 2004 Ingersoll-Rand.
All rights reserved.

921265-00